





USER MANUAL

for wireless charger power bank






ITE: Accessories
Model: SP0370
Item No.: 32272
Input: DC 5V / 1800mA
Maximum input: DC 5V / 2400mA
Output: DC 5V / 2100mA
Wireless output: DC 5V / 800mA
Wireless charging distance: Max.6mm
Battery/Cell capacity: 37Wh , 3.7V / 10000mAh
Product capacity (USB): 27Wh , 5V / 5400mAh
Product capacity (Wireless): 23Wh , 5V / 4600mAh
Operating temperature: 0~45°C for Charging
0~45°C for Discharging
Product Name: Power Bank

EN
CAUTION: Risk of Fire and Burns, don't open, crush, disassemble and dispose of in fire. Accessible surfaces held or touched for short periods only. Don't heat above 45°C or incinerate. Follow Manufacturer's Instructions

FR
DANGER: risque d'incendie et de brûlures, ne pas ouvrir, démonter, écraser ni jeter au feu. Ne pas toucher ou tenir les surfaces accessibles sur une longue durée.

MADE IN CHINA

PRODUCT OVERVIEW

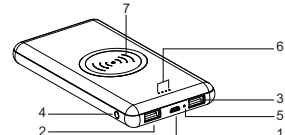

1. 5V Input Port (Micro USB)

2. 5V Output Port (USB A-type)

3. 5V Output Port (USB B-type)

4. ON/OFF Button

5. LED indicator (Wireless)


6. LED indicator (advise of remaining charge – number of illuminated lights decreases as power supply dwindles.)

7. Wireless charging area

Button and Indicator

| Status | LED Indicator |
|---------------------|---------------|
| Charging | flash(Blue) |
| Fully charged | lit(Blue) |
| Working | lit(Blue) |
| Charging (Wireless) | lit(Green) |
| Standby (Wireless) | lit(Red) |
| Power On | Press once |
| Power Off | Double press |

 Accessory: USB Cable



USB CABLE

outlet on your computer. Using the micro USB connector, connect the other end of the USB cable to an IN port on the portable Power bank. Make sure the computer is on to begin charging the portable Power bank.

2. Charging mobile phones and other electronic devices with USB output.

a. The portable power device has a USB output port which has the maximum output current of 2100 mA.

b. Connect to USB cable to your mobile phone/device using the appropriate connector. Connect the other end of the USB cable to the OUT port of the portable Power bank. Your mobile phone/device should display the status of charging.

c. Remove the USB cable from your mobile device when it is fully charged.

3. Charging mobile phones and other electronic devices with wireless output.

To use the wireless charging mode the mobile device needs to be a Qi-enabled device. If necessary, enable wireless charging in the settings of your mobile device. Next simply stick your device to the charging area and the wireless charging will start.

Note: In order to charge device use only accessory cable (provided with power bank) or the cable included with your own device by the manufacturer.

IMPORTANT SAFETY PRECAUTION

WARNING – When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Power bank main unit contains an internal lithium ion battery. Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
3. Power banks are not allowed in checked luggage on commercial airline flights. Handle with care and dispose of in accordance to local regulations. Carry-on only.
4. To reduce the risk of injury, close supervision is necessary - when the product is used near children.
5. Do not put fingers or hands into the product.
6. Do not expose power bank to rain or snow.
7. Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.

8. Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.

9. Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

10. Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.

11. Do not expose a power pack to fire or excessive temperature. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).

12. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

13. Do not charge the power bank while using the power bank to charge a device. Do not charge the power bank for more than 10 hours and do not leave unattended.

14. Disconnect the power bank when not in use.


FCC STATEMENT

- This device complies with Part 18 of the FCC Rules
- The interference potential of the device or system.
- Maintenance of the system.
- Simple measures that can be taken by the user to correct interference.
- For RF lighting devices, provide an advisory statement, either on the product packaging or with other user documentation, similar to the following:
This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

SAVE THESE INSTRUCTIONS


Front

How to Use Correctly?




Centrally Placed

✓




Plastic Case thickness ~4mm

✓




Crookedly Placed

✗




Magnetic Case

✗




Bulky Case thickness>4mm

✗




Metal Ring Case


✗



Credit Card Case

✗





SAFETY WARNING

In order to prevent conditions that can lead to overheating, please make sure that the wireless charging pad surface is free of all metal objects at all times, such as coins or paper clips. In addition, before charging, please remove anything metallic attached to the back of the phone, such as battery cases, ring holders, or plates used for mounting to magnetic phone holders.

Back