





USER MANUAL

for wireless charger power bank





ITE: Accessories Lithium ion battery UL 2056 certified

Model: SP0526 Item No.: 32373
Input: DC 5V/2000mA Maximum input: DC 5V/3000mA
Total output:DC 5V / 2100mA
Output(USB): DC 5V/2100mA Output(Wireless): DC 5V/1000mA
Battery/Cell capacity: 18.5Wh , 3.7V / 5000mAh
Wireless charging distance: 4mm
Product capacity(USB): 12.5Wh , 5V / 2500mAh
Product capacity(Wireless): 10.5Wh , 5V / 2100mAh
Operating temperature: 0~45°C for Charging
0~45°C for Discharging


Product Name: Power Bank

EN
CAUTION: Risk of Fire and Burns, don't open, crush, disassemble and dispose of in fire. Accessible surfaces held or touched for short periods only. Don't heat above 45 °C or incinerate. Follow Manufacturer's Instructions

FR
DANGER: risque d'incendie et de brûlures, ne pas ouvrir, démonter, écraser ni jeter au feu. Ne pas toucher ou tenir les surfaces accessibles sur une longue durée.

MADE IN CHINA


PRODUCT OVERVIEW

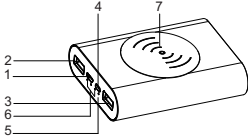

- 5V Input Port (Micro USB)
- 5V Output Port (USB A-type)
- 5V Output Port (USB A-type)
- ON/OFF Button
- LED Indicator (Wireless)
- LED indicator (advise of remaining charge – number of illuminated lights decreases as power supply dwindles.)
- Wireless charging area

Button and Indicator	
Status	LED Indicator
Charging	flash(Blue)
Fully charged	lit(Blue)
Working	lit(Blue)
Charging (Wireless)	lit(Green)
Power On	Press once
Power Off	Double press

Accessory: USB Cable



How to use
Instructions:

- Charging the portable Power bank
 - Using your mobile phone's USB adapter. Connect a USB cable to your phone's USB adapter. Using the micro USB connector, connect the other end of the USB cable to the IN port on the portable Power bank. Plug the USB adapter into the outlet to begin charging.
 - Using your computer. Connect a USB cable to a USB outlet on your computer. Using the micro USB connector, connect the other end of the USB cable to an IN port on the portable Power bank. Make sure the computer is on to begin charging the portable Power bank.
- Charging mobile phones and other electronic devices with USB output.
 - The portable power device has a USB output port which has the maximum output current of 2100 mA.
 - Connect to USB cable to your mobile phone/device using the appropriate connector. Connect the other end of the USB cable to the OUT port of the portable Power bank. Your mobile phone/device should display the status of charging.
 - Remove the USB cable from your mobile device when it is fully charged.
- Charging mobile phones and other electronic devices with wireless output.

To use the wireless charging mode the mobile device needs to be a Qi-enabled device. If necessary, enable wireless charging in the settings of your mobile device. Next simply stick your device to the charging area and the wireless charging will start.

Note: In order to charge device use only accessory cable (provided with power bank) or the cable included with your own device by the manufacturer.

IMPORTANT SAFETY PRECAUTION

WARNING – When using this product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- Power bank main unit contains an internal lithium ion battery. Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- Power banks are not allowed in checked luggage on commercial airline flights. Handle with care and dispose of in accordance to local regulations. Carry-on only.
- To reduce the risk of injury, close supervision is necessary - when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose power bank to rain or snow.
- Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.


- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose a power pack to fire or excessive temperature. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
- Have servicing performed by a qualified repair person using only identical replacement parts.This will ensure that the safety of the product is maintained.
- Do not charge the power bank while using the power bank to charge a device. Do not charge the power bank for more than 10 hours and do not leave unattended.
- Disconnect the power bank when not in use.

FCC STATEMENT

- This device complies with Part 18 of the FCC Rules
- The interference potential of the device or system.
- Maintenance of the system.
- Simple measures that can be taken by the user to correct interference.
- For RF lighting devices, provide an advisory statement, either on the product packaging or with other user documentation, similar to the following:
This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.


Front

How to Use Correctly?




Centrally Placed

✓




Plastic Case thickness < 4mm

✓




Crookedly Placed

✗




Magnetic Case

✗




Bulky Case thickness > 4mm

✗



Metal Ring Case


✗



Credit Card Case

✗

SAVE THESE INSTRUCTIONS



SAFETY WARNING

In order to prevent conditions that can lead to overheating, please make sure that the wireless charging pad surface is free of all metal objects at all times, such as coins or paper clips. In addition, before charging, please remove anything metallic attached to the back of the phone, such as battery cases, ring holders, or plates used for mounting to magnetic phone holders.

Back